

## Removing Thermostat from Base

**Step 1:** Using your right hand, place thumb on the bottom left outer edge of ExactLogic thermostat; place forefinger on bottom right outer edge of ExactLogic thermostat.



**Step 2:** Squeeze thumb and forefinger around thermostat

**Step 3:** Pull on the bottom left corner of ExactLogic thermostat with thumb.



**Step 4:** Once the bottom left corner has popped loose, pull on bottom right corner of ExactLogic thermostat with forefinger until bottom half of thermostat is disconnected from the base of the ExactLogic thermostat.



**Step 5:** Pull up on ExactLogic thermostat until the top pops off.



## Replacing Thermostat on Base

**Step 1:** Place top half of ExactLogic thermostat back onto base



**Step 2:** Push bottom of ExactLogic thermostat in with thumb and forefinger until it clicks back into place

